


Steel Out-swing Door Installation Guide

Install this system in the center hinge of the door. For doors with Four Hinges, install in the lower center hinge.



In the hinge half that is mounted in the door, mark the vertical center of the hinge. Use the centerline of the thickness of the door to complete the center-mark. Drill a $\frac{1}{2}$ " hole at this point.

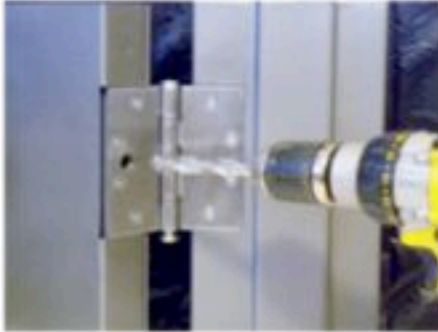

Insert the blind hole transfer into this hole. Close the door to create a center mark on the doorframe.



At this Center mark, drill a $\frac{5}{8}$ " Hole. Remove the blind hole transfer from the other hole.




In the $\frac{1}{2}$ " hole in the door hinge half, insert the Female bushing until the flange seats against the hinge.



Into the Female bushing, insert the male part as far as it will go.



With a hammer, drive the male part into the female part until the shoulder is flush with the female flange.

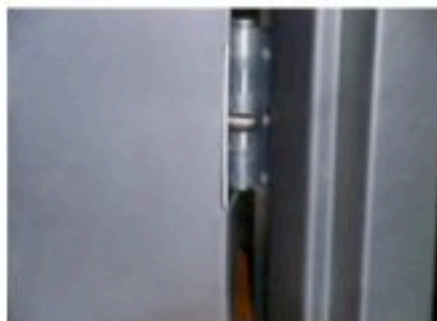

Close the door to check for proper alignment.